

# Rotae Tyre Lever Instructions

## Table Of Contents

<b>Table Of Contents</b>	<b>1</b>
<b>Purpose</b>	<b>2</b>
<b>Safety Instructions</b>	<b>3</b>
<b>Tyre Lever Features</b>	<b>4</b>
<b>Removing A Bicycle Tyre</b>	<b>5</b>
<b>Fitting A Tyre</b>	<b>8</b>
<b>Removing Presta Valve Core</b>	<b>13</b>
<b>Brake Pad Separation</b>	<b>14</b>
<b>Maintenance</b>	<b>15</b>
<b>Warranty</b>	<b>16</b>

# Purpose

This document provides information and instructions on the use of the Rotae Tyre Lever Set.

# Safety Instructions

When using the Rotae Tyre Levers there are no residual risks to be aware of.

# Tyre Lever Features

1. Tyre levers
2. Bead clip
3. Presta valve tool
4. Brake pad separator

(Isometric view of levers with balloon references to features)

# Removing A Bicycle Tyre

**Step 1** - Push the tyre bead towards the center of the rim profile all around the rim and on both sides of the tyre.

**Step 2** - Insert tyre levers between the tyre and the rim at 12 O'clock as shown and lever the tyre bead over the rim.



**Step 3** - At this point it's possible to secure one of the levers in position on the spokes allowing you to move the second lever around to another position to remove the next section of tyre.



**Step 4** - Once you have enough slack, take one of the levers and slide it around the rim to remove the rest of the tyre bead. If this is not possible and there is too much friction, it may be necessary to remove one lever and to lever another section of the tyre off the rim.



**Step 5** - Once one side of the tyre has been removed repeat with the remaining side.

# Fitting A Tyre

**Step 1** - Check to see if your tyre is directional and push onto the rim by hand as far as possible





**Step 2** - Insert tyre lever in between the rim and the tyre and lever the tyre over and onto the rim.



**Step 3** - Once you have one side of the tyre onto the rim, pour required amount of tyre sealant into the tyre. Otherwise insert an inner tube (ensure the inner tube has been inflated with a small amount of air to reduce the chances of pinching).

**Step 4** - Insert the bead clip as shown and then install the tyre onto the rim as far as possible by hand.



**Step 5** - With the other lever install the remainder of the tyre onto the rim.





**Step 6** - Remove the bead clip.

## Removing Presta Valve Core

Use the Presta valve tool to loosen the valve core as shown.



# Brake Pad Separation

Use the tyre lever to separate brake pads as shown



# Maintenance

No maintenance is required

# Warranty

Our tyre levers come with lifetime warranty